

EONTM
pc-based monitor
user guide
for vers. 3.0.11 software

Contents

7	Chapter 1: Eon™ at a Glance
7	Eon™ Connectors
9	Accessories
12	Mirage™ Air-Cooling System
14	Chapter 2: Getting Started
14	Eon™ System Assembly
20	Chapter 3: Program Control
20	Program Control Screen
20	Process List
21	Layer List
22	Layer Properties List
23	Layer Properties Defined
24	Chapter 4: Heater Control
24	Heater Control Screen
25	Heating Cycle List
26	Heater Settings List
28	Heater Control Buttons
29	Heater Thermostat
30	Temperature & Power Indicators
30	Advanced Settings
31	Chapter 5: Settings
31	Settings Screen
31	Backup & Restore
32	Restore Defaults
32	Period Control
33	Relay Control
33	Sensor Zeroing
34	Log
34	Sensor Alerts
35	Select Sensor Type

Contents

36	Chapter 6: Manual Mode
36	Manual Control
36	Adjusting Source & Heater Power
37	Exiting Manual Mode
38	Chapter 7: Vertical Tool Bar
38	Aborting a Process
38	Logging Eon™ Status
39	Zeroing the Sensors
39	Activating Relay 1 and Relay 2
39	Exiting Eon™ Software
40	Chapter 8: Status
40	Status Screen
41	Health, Layer, Material, Frequency, Rate, and Thickness
41	Zero Sensor
41	Source Power
42	Temperatures
42	Manually Zeroing Individual Sensors
43	Chapter 9: Green Status Bar
43	Status Indicators and Remote Process Control
44	Chapter 10: Graphs
44	Graph Screen
44	Adjusting Y Values
45	Graphs
45	Color Key

Contents

46	Chapter 11: Screen Lock
46	Password-Protect Eon™ Screens
46	Screen Lock Button
47	Locking a Screen
47	Setting a New Password
48	Resetting the Password
49	Chapter 12: Troubleshooting
50	Chapter 13: Specifications
50	Device Parameters
50	Coating
51	Measurement
51	Process Display
51	Communications
52	Inputs and Outputs

Appendices

53	Appendix A: Tempe-Eon™ System
53	Tempe-Eon™ System Configuration
54	Appendix B: Quick Info
54	Screen Selection Tool Bar
54	Adding a Process
54	Renaming a Process
54	Deleting a Process
55	Edit the Name, Rate, and Thickness of a Process
55	Adding a Layer to a Process
55	Copy a Layer
55	Re-ordering the Layers
55	Changing Properties of a Layer
56	Layer Properties List
56	Removing a Layer
56	Deleting a Layer
56	Changing the Material for a Layer
57	Heater Control
57	Creating a Heater Cycle
57	Cleaning the Sensor with a Heater
58	Clean Settings
59	Vertical Tool Bar
60	Settings
62	Appendix C: Safety, Handling, & Support
63	About Eon™
63	LabVIEW Interface
63	Software Updates
63	Inspection & Initial Setup
63	Warranty
65	Appendix D
65	Tooling Factor

Miscellaneous

66 [Index](#)


Eon™ at a Glance

1


This guide describes Eon™ monitor with temperature control (3rd generation) and Eon™ software version 3.0.11.

Eon™ Connectors

Eon™ Front

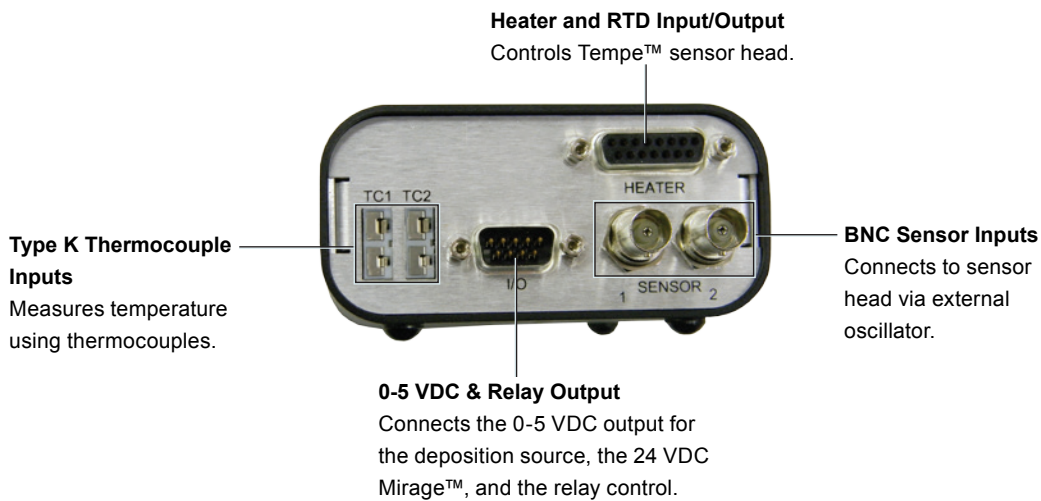

Eon™ Back

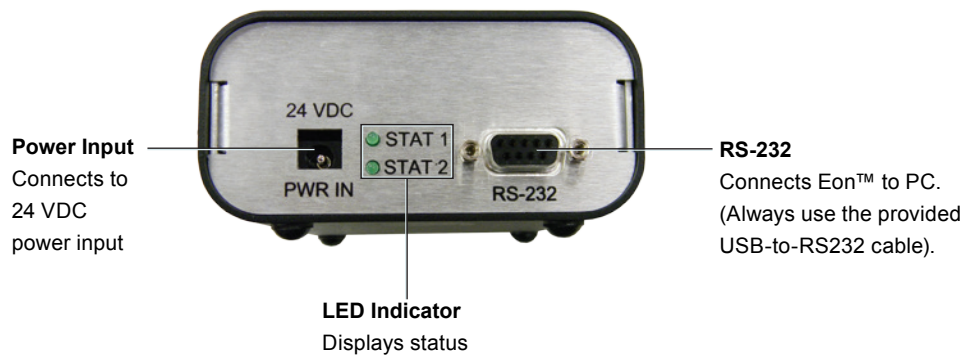



WARNING Make sure the correct hardware is used with Eon™ inputs and outputs. See proper setup procedures in this manual and in the Tempe-Eon™ quick reference guide.



WARNING Only the provided power supply should be used with Eon™. Not doing so will damage product and void warranty. Make sure power supply has a 24 VDC.


Accessories

The Eon™ ships with a variety of accessories.


Mirage™ air-cooling system. As part of the Eon™ temperature-compensation system, this cooling accessory channels compressed, cold air into the Tempe™ sensor in order to maintain consistent temperatures inside crystal compartment.




Mirage power adapter. Combines Mirage™ power supply and relay cables.

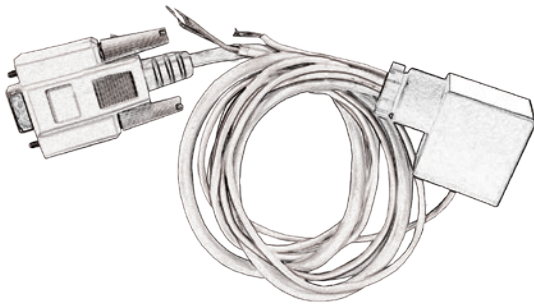


Mirage air-cooling tube. Delivers cold air into sensor head cooling tubes.

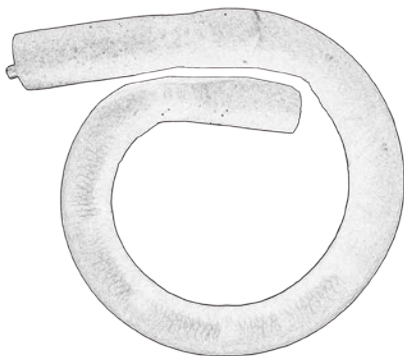


Power supply and cable. Input 100-200 VAC, 50/60Hz, 2 A. Output 24V, 3.75 A, 90W Max.

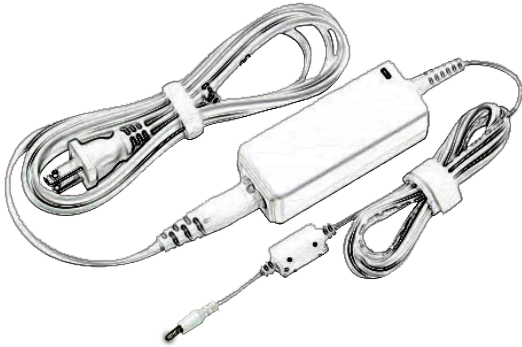

RS-232 extension cable. Male-to-female serial cable.

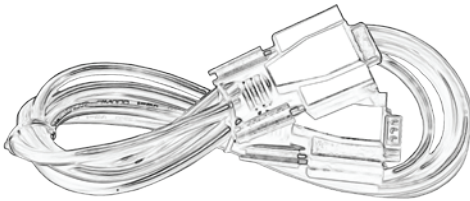


USB to RS-232 adapter. Connects RS-232 cable and PC.

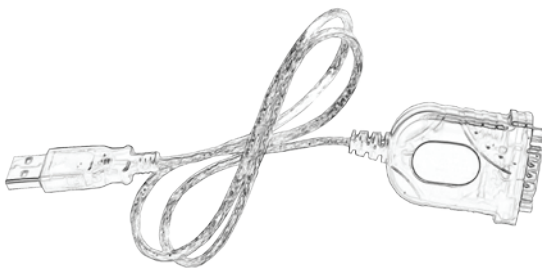

External oscillator. Replaces the Eon™ internal oscillator.



Tempe-Eon™ quick reference guide. Instructs user in quickly assembling and integrating Eon™ into existing system.

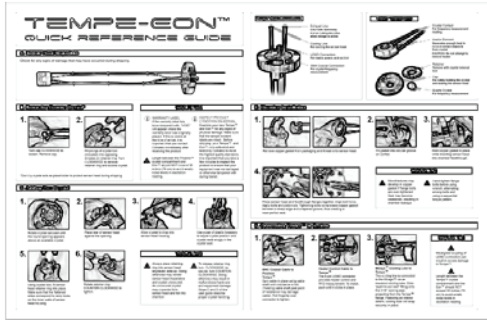


Software CD. Contains Eon™ software suite.



Mirage™ Air-Cooling System

The self-heating Tempe™ sensor employs a unique cooling system called the Mirage™ Air-Cooling System that connects through the DB-9 port. The Mirage™ forces cold air through the Tempe™ crystal compartment to counterbalance heat.

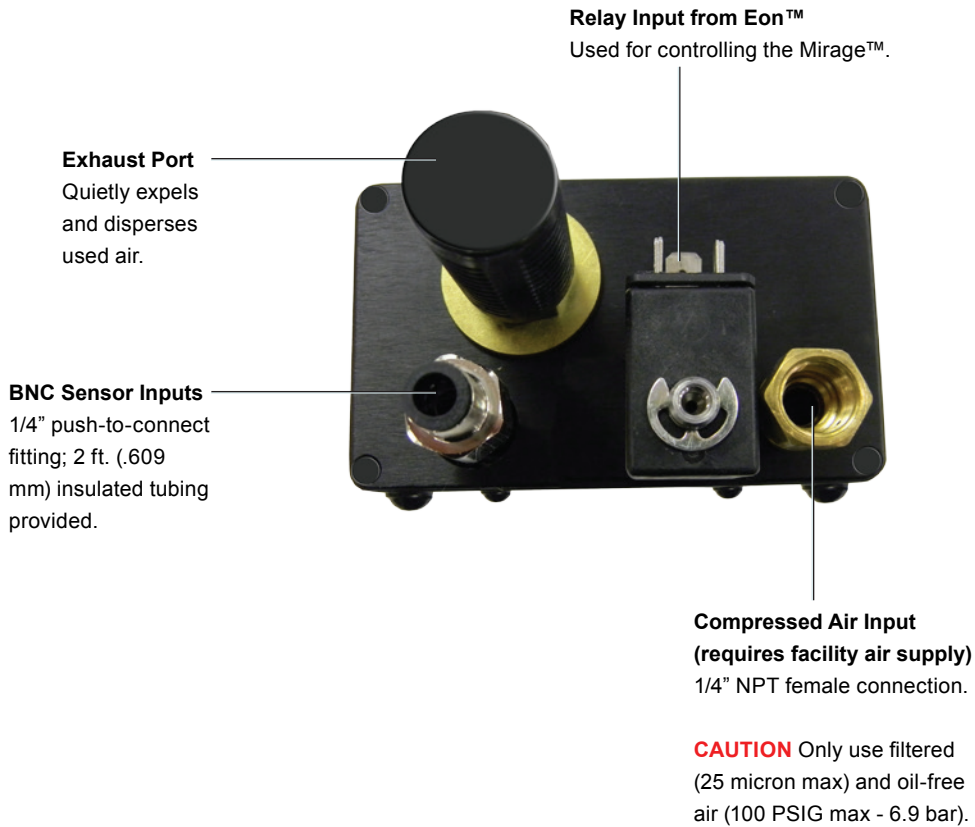

How it works

In order to achieve and maintain a specific target temperature on the crystal, the Tempe™ first heats the crystal to the temperature set in the deposition control menu of the Eon™ GUI. If the Tempe™ exceeds the desired temperature, the Mirage™ is triggered, blasting the crystal compartment with cold air and returning the crystal surface to the desired temperature. This type of regulated, hot-to-cold ratio control mechanism is capable of sustaining a tolerance of $\pm 1^\circ \text{C}$.

Because it is triggered by a simple relay input, the Mirage™ can be used as a cooling device in other applications.

Mirage™ Features

Refrigerant-Free Air Cooling

Not only maintenance free and environmentally safe, but when using regulated air the Mirage™ is easily capable of holding the sensor to a tolerance of $\pm 1^{\circ}\text{C}$.

Maintains Temperature up to 500°C

The Mirage™ produces a temperature output capability of 28°C (50°F) BELOW the supply air temperature, allowing the Tempe™ sensor head to maintain any temperature within 50 - 500°C .

Quiet Operation

While the cold air output is connected to the Tempe™ sensor head through a cooling line, the Mirage™ reduces noise by muffling and dispersing the hot air output.

Versatility of Application

Working from a simple relay input, the Mirage™ can be used as a cooling device in alternative applications.



WARNING Operating temperature SHOULD NOT be allowed to exceed 500°C . Equipment damage will likely result.

Getting Started

2


Eon™ System Assembly

The following guide will describe in detail how to integrate the Eon™ monitor into a basic QCM configuration. The QCM depicted below is the Colnatec Tempe™ sensor head featuring temperature control technology. If using an alternative QCM, skip the steps highlighted in red. (See Appendix A for connection map of a fully assembled Tempe-Eon™ system).

Connecting to QCM


1. BNC Coaxial Cable to QCM

Spin cable in place using cable shaft until resistance is felt. (Twisting cable shaft past point of resistance may damage cable). Roll fingertip over connector to tighten.

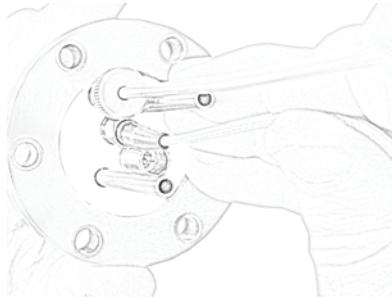

2. Heater Control Cable to QCM


The 4-pin LEMO™ connector provides heater control and TC measurement. To install, push until it clicks in place. The other end is a DB-15 that connects to the DB-15 heater port on the Eon™ deposition monitor.

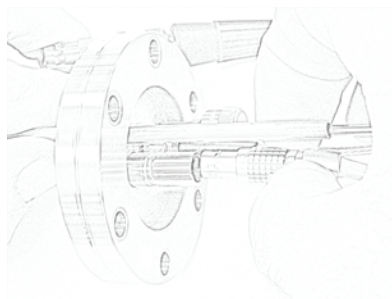

WARNING Misaligned coupling of LEMO connectors can result in severe damage to Tempe™.

3. **Mirage™ cooling line to QCM**


The cooling line is connected to the Mirage™ via an insulated cooling tube. Slide “push-to-connect” fitting onto the 3/16” cooling pipe projecting from the QCM flange. Featuring an interior detent, cooling tube will snap securely in place.

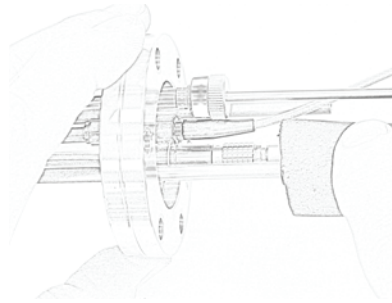

Connecting to Eon™


1. **BNC Coaxial Cable to Eon™**

Slide coaxial connector onto BNC.

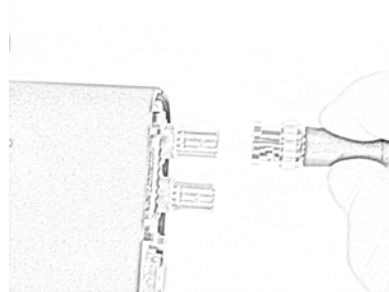

2. **Heater Control Cable (DB-15 Connector) to Eon™**

Plug DB-15 connector into the Eon™ 15-pin male heater port.

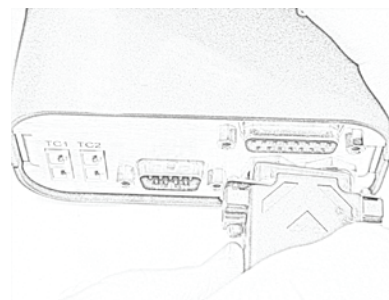


WARNING DO NOT allow operating temperature to exceed 500°C. Equipment damage will likely result.

Hardware and electronics


1. Cold Air Output from Mirage™ to Tempe™

Slide the 3/16" tube onto the "push-to-connect" fitting on rear of the Mirage™ cooling system. The Mirage™ provides a maximum output of 28°C (50°F) below the compressed air source.

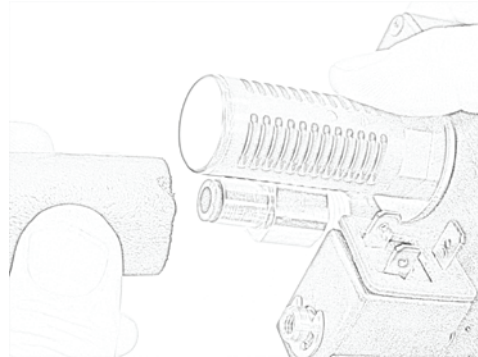


2. Compressed Air Input to Mirage™

Connect the Mirage™ to a filtered and oil-free compressed air source. (Air fittings may vary by country but require a 1/4 NPT female connection.)

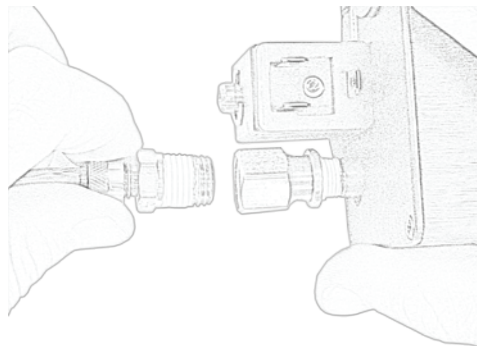


3. Eon™ Supplies Power to Mirage™ through Power Module

The 3-pin solenoid module provides power to Mirage™. Tighten integrated screw after mating to Mirage™. The DB-9 connector on other end attaches to male I/O port on Eon™.

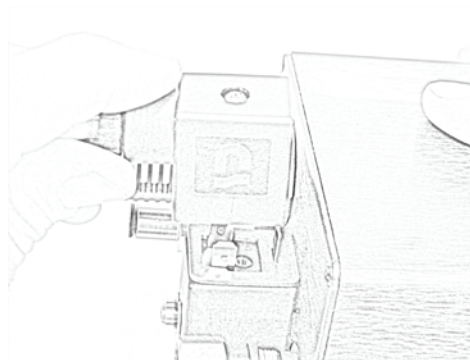


4. Connect Mirage™ Cable to Eon™

Connect 9-pin female-side of Mirage™ cable to Eon™ I/O port.

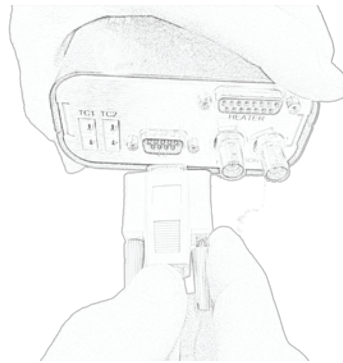

5. Relay Cable from Eon™ to Mirage™


Part of the DB-9 connector cable bundle that plugs into the Eon™ I/O port and relay provides a 2-wire interface for switching.

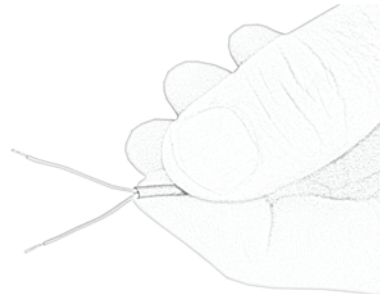

Connecting Eon™ to PC


1. Install Eon™ Software onto PC

Insert the accompanying Eon™ software CD into disc drive. Follow prompts to install software onto PC.

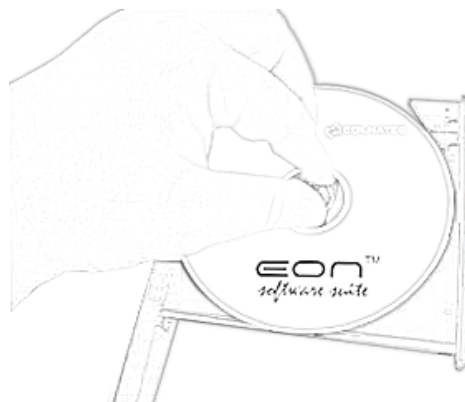

2. **RS-232 to Eon™**


Plug RS-232 connector into female serial port on rear panel. Tighten integrated screws.

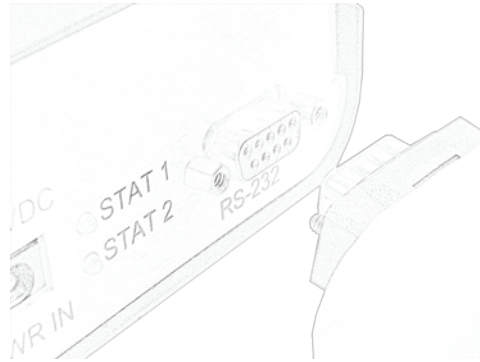

3. **RS-232 cable to USB**

Adapter


Plug the other end of the RS-232 cable into the USB-to-RS-232 adapter. Tighten integrated screws.

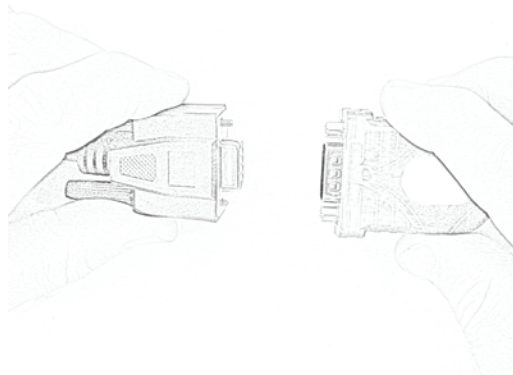

4. **Plug USB-to-RS-232**


Adapter into PC

Plug USB-end of the USB-to-RS-232 adapter into PC.

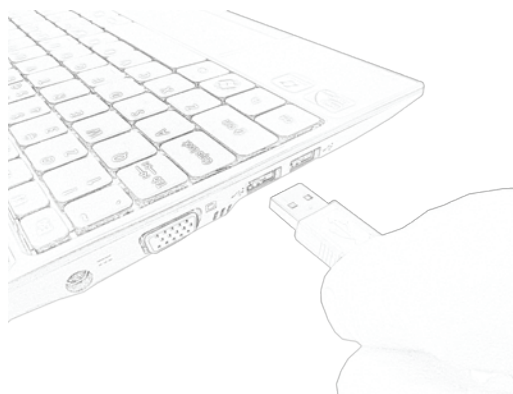


5. **Connect Power to Eon™**

Plug Eon™ power adapter into AC outlet. Then plug DC connector into the Eon™.

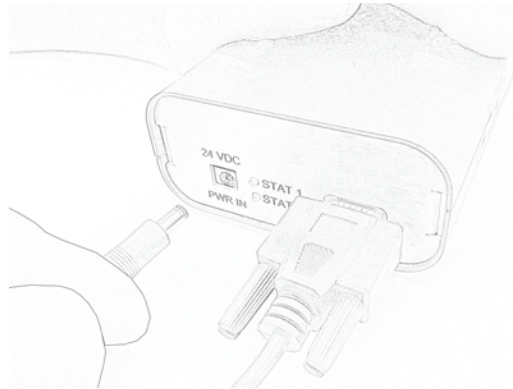

6. **Start Eon™ Software**

Start Eon™ software and navigate to the Program Control screen to begin creating your processes. See Chapter 3.

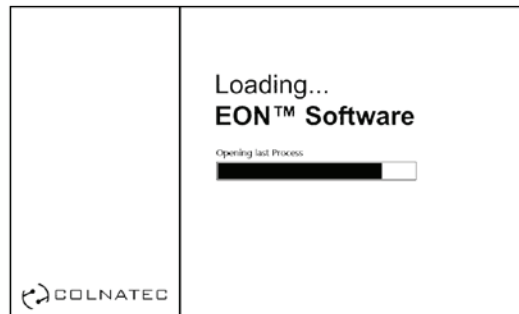

If drivers are already installed, simply update the drivers when installing software.

Use only the provided USB cable.

Ensure that the software has been fully installed before connecting Eon™ to your PC.


Reboot PC following Eon™ software installation.

Program Control

3


Program Control Screen

Click the Program button in the Control Menu to access the Program screen. With this screen you will be able to create a new process, edit or delete an existing process, as well as add or remove layers and layer properties.

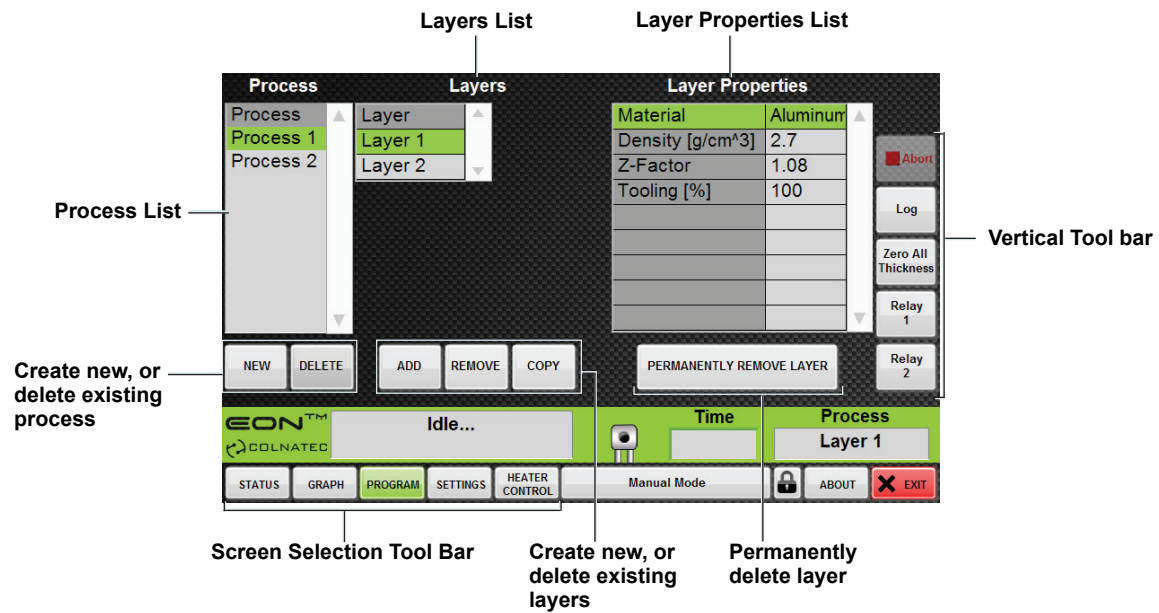


Process List

Create a new process. Selecting the New button located below the Process List allows you to create and name a new process.

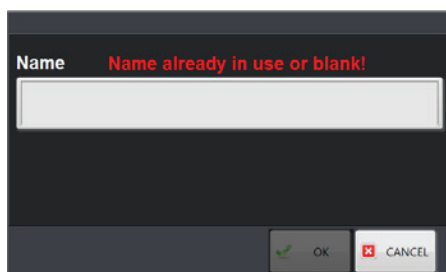

Delete a process. Pressing delete will permanently delete a process. Once deleted, a process is only recoverable if it was backed up prior.

Renaming a process. Double-click a process in the Process Layers List.

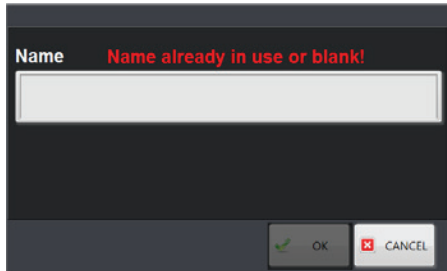


Layers List

Open the Layers List. Click a process name. Layers List displays the current layers associated with a process. Set the rate, thickness, name, and order of the layers.

Add a layer. Click a process name.

Select a layer. Single-click.

Edit layer name. Double-click a layer. Modify the name, rate, and/or thickness. Click OK.

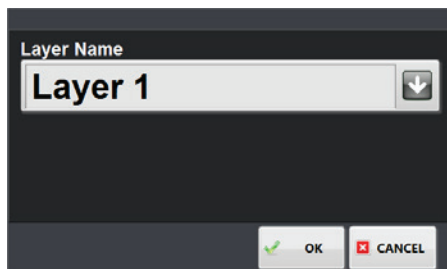


Copy Layer. Select an existing layer and press Copy to produce a copy in the list.

Change order of layers. On the Layers List click and hold a layer, drag the layer up or down the list, and release the layer where desired.

Remove Layer. On the Layers List click and hold a layer, drag the layer up or down the list, and release the layer where desired.


Create new layer. Select New button located below the Layers List. You can also use an existing layer by typing in the layer name or pressing the dropdown arrow to reveal a list of currently available layers.

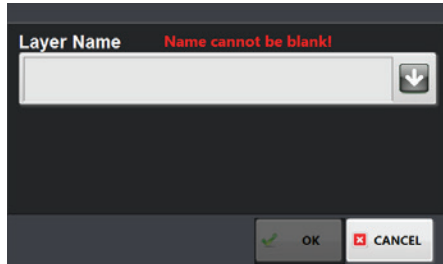

Layer Properties List

Enter or change values for layers. The Layer Property Value window allows you to enter or change the value of a layer property. (Note: Material, Source, and Sensor operate differently than the other items listed on the Layer Properties List).


Open Layer Property Value window. Double-click a layer property at any time, even during a process run.

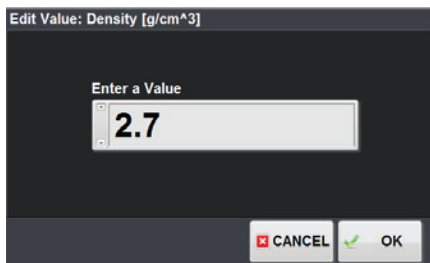

Enter a value and click OK or Cancel.

Permanently remove layer. Use the Permanently Remove Layer button to delete a selected layer. A deleted layer is removed from ALL processes (including those not selected). Once deleted, a layer is only recoverable if it was backed up prior.

Select a material. Scroll down and click on the Material row to open the Materials List. Select the applicable material and double-click a material or click OK. The correct density and Z-Factor is automatically set.

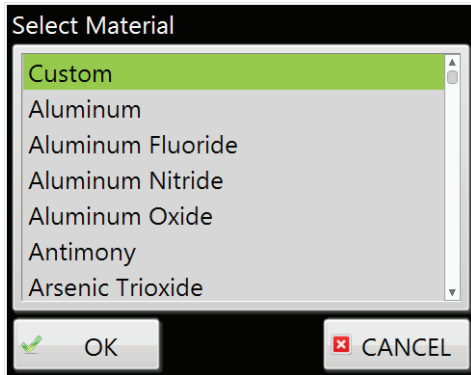

Materials list.

If the material being applied in your process is unlisted, select Custom and click OK. You can then manually enter your custom Density and Z-Factor settings in the Layer Properties List. Note also that whenever you manually change Density and Z-Factor settings to an unlisted material, the software will automatically classify the material as “Custom”.

Layer Properties Defined

The following is a list of settings that defines the parameters of the deposition. All settings must be set correctly for the software to function properly.


- **Materials**
The material being applied during the deposition process. This entry turns to “Custom” if the Density or Z-Factor is modified by the user, in order to prevent mismatch.
- **Density**
The density of the selected material being applied.
- **Z-Factor**
Acoustic impedance factor which is used to compensate for dense materials and is predefined based on the selected material.
- **Tooling [%]**
The geometric relationship between the substrate and the positioning of the sensor.

Heater Control


4

Heater Control Screen

Click the Heater Control button in the Screen Selection tool bar to access the Heater Control screen. With this screen the user will be able to create new heating cycle, edit or delete existing heating cycles, as well as adjust the heater settings.

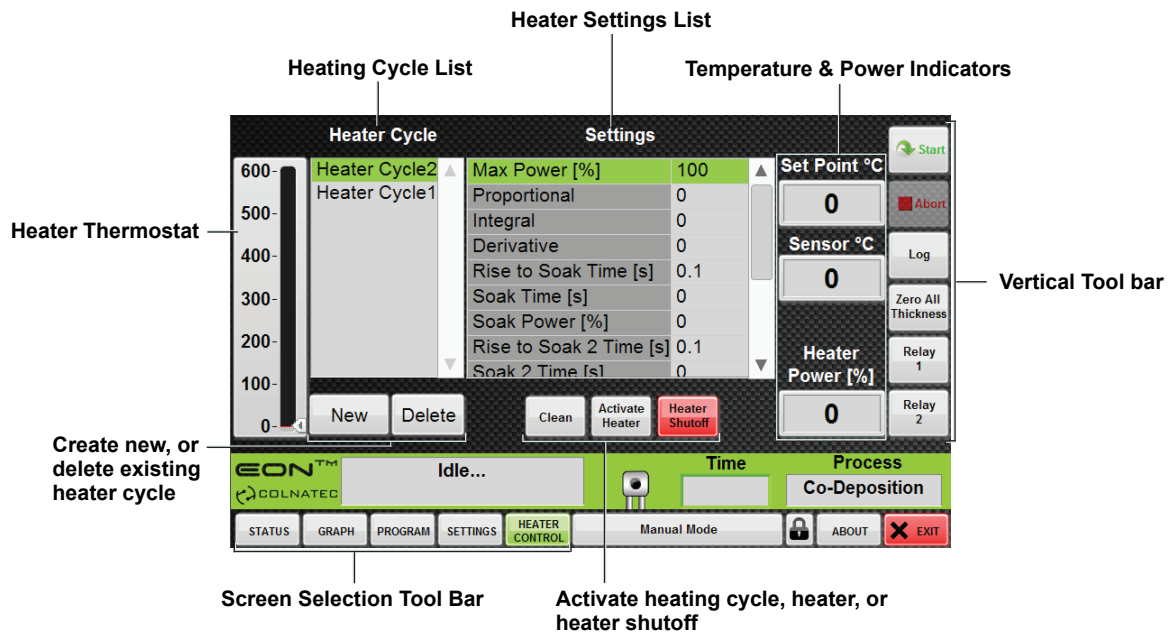


Adding heater constants. Before the heater can be engaged, the heater constants specific to each sensor must be entered into the heater constant fields on the Settings screen. Click the Settings button in the Screen Selection tool bar. Under the Heater tab on the Settings screen enter the heater constant data into the Heater Constant A and B fields. The heater constants for the sensor head were included with the paperwork that accompanied your sensor.

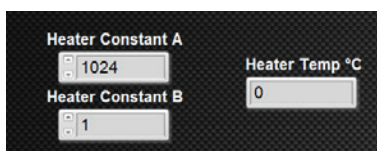

Selecting correct sensor.

 
The Temperature Sensor selector is located under the Heater tab on the Settings screen.



Colnatec currently offers two different sensor head designs. The design being used determines which temperature sensor setting should be selected. **Selecting the incorrect heater sensor will cause the heater to operate incorrectly.** In order to ensure proper heater function, use the following settings:

- **Screw Cap Design → Select TC**
- **Twist Lock Design → Select RTD**

Enabling Mirage™. The heater inside the sensor is part of a “temperature compensation” system. Activating the heater requires that each component in this system be made fully operational. In order to activate the heater, the user must first enable the Mirage™. To do so, first click Settings on the Screen Selection tool bar and then the Relay Control tab. Select Mirage™ under Relay 2 in the Relay Control area. The Mirage will now respond to commands issued from the Heater Control screen.

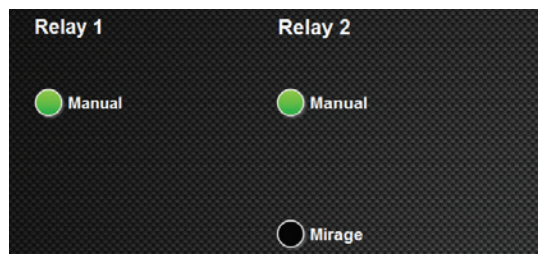

Enable Mirage™



Heating Cycle List

The following section will explain how to create a new heating cycle, and how to edit or remove an existing heating cycle. The list contains all of the available heating cycles.


Create a new heating cycle. Selecting the New button located below the Heating Cycle List will bring up a window that allows the user to create and name a new cycle.

Delete a heating cycle. Selecting Delete will permanently delete the selected heating cycle. Once deleted, a cycle is only recoverable if it was backed up prior.


Heater Settings List

With the Heater Settings List, the user will be able to change the operation of the heater, such as sensor body temperature, clean time, and heater initialization.

Change a value on the Heater Settings List. Double-clicking on a selection brings up the Heater Settings Value window, which allows the user to edit the value of the setting.

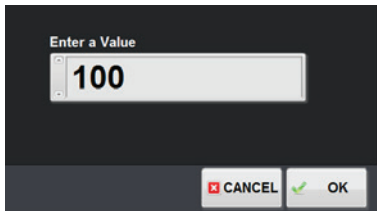


Entering an improper value raises a warning prompt, requiring that the user correct the error or leave the original value in place.

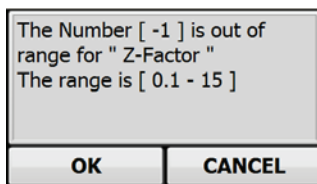

Heater Settings List management. The items below appear on the Heater Settings List. By default the values for these items are set to standard levels. Be sure to go through and adjust each value according to the specific process.

- **Max Power**
Represents the maximum power level Eon™ will deliver to the heater [from 0%-100%], regardless of the power levels being demanded by temperature settings.
- **Proportional**
The proportional coefficient that controls the rate during the PID phase.
- **Integral**
The integral time constant that controls the rate during the PID phase.
- **Derivative**
The derivative time constant that controls the rate during PID phase.

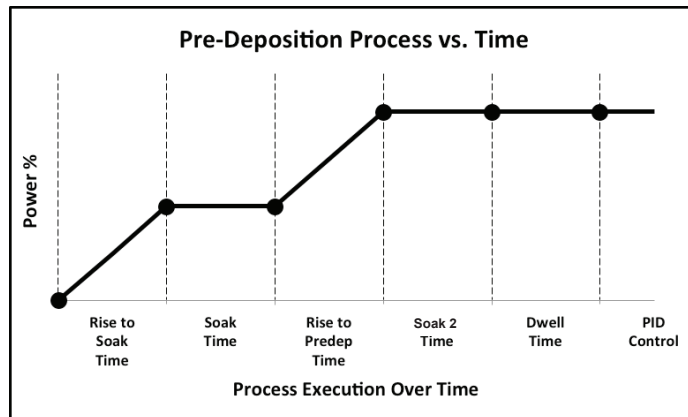


Predeposition process vs. time

- **Rise to Soak Time**
The time specifying how long it takes Eon™ to raise heater power from 0% to desired soak power
- **Soak Time**
Once the soak power is reached, this is the time specified that the Eon™ sits at soak power before continuing to Rise to Soak 2.
- **Soak Power**
The power percentage that the source will achieve during soak process.
- **Rise to Soak 2 Time**
The time before Eon™ changes the current source power to the power percentage set for Soak 2.
- **Soak 2 Time**
Time Eon™ will maintain the set Soak 2 power before entering PID mode.

- **Soak 2 Power**
Power percentage that the source will achieve during Soak 2 processes.
- **Stabilization Time**
A placeholder for future Eon™ versions that has no effect on heating cycles.
- **Heater Set-point**
Temperature desired for the heater to reach.
- **Clean Time**
Time the heater will remain at the Heater Set-point temperature. Once time is complete, heater shuts down and program enters cooling stage.
- **Cool Time**
Time Mirage™ will operate reduce sensor temperature to a desired level.

 Heater Control Buttons




The **Clean** button activates the selected heating cycle, which is used to remove deposited material from the crystal surface.

During a typical Clean procedure, Soak and Soak 2 phases engage. Once soaking is complete, the heater is triggered and guided by the parameters it has been assigned on the Heater Settings List. The program will first raise the sensor body to the **Set Point** temperature, maintain the temperature for the **Clean Time** duration, and then “force-cool” for the time specified by the **Cool Time** entry. Selecting **Heater Shutoff** deactivates a cleaning cycle.



 
The **Activate Heater** button manually activates the heater. The program raises the temperature to the **Set Point** and maintains that temperature indefinitely until the heater is manually shutoff. Unlike the Clean button. The Activate Heater button provides no automated control over clean and cool times. Otherwise, just as with the Clean command, the Activate Heater command engages Soak and Soak 2 and triggers the heater. Selecting **Heater Shutoff** deactivates the Activate Heater command.



The **Heater Shutoff** button instantly deactivates the heater, regardless of current process or cycle status. Note: If selection of Heater Shutoff is not followed by use of a forced-cooling method (e.g., Mirage), the temperature of the sensor head will cool slowly.


Heater Thermostat


The Heater Thermostat provides real-time display of sensor body temperature.

An arrow marker  indicates the current set point for the sensor body temperature.

Temperature & Power Indicators

Temperature & Power Indicators provide a live reading of the current temperatures of the sensor body and heater, the preset sensor body temperature, and heater power.

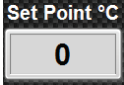The **Set Point Temperature** indicator  displays the target temperature chosen by the user in the Heater Settings list. The heater will engage or disengage as needed to reach this desired temperature.

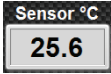The **Sensor Temperature** indicator  displays the current temperature of the sensor.

The **Heater Power** indicator  monitors the power levels the Eon™ is issuing the heater in order to raise or lower heater temperature to achieve the predetermined temperature.



WARNING The Abort button  DOES NOT shut off the heater. The Abort button is used to cancel a process in progress or manual mode only.

Advanced Settings

Skipping soaking steps

When initiating a heat cycle, the user has the option of skipping Soak and Soak 2 and initiating the heating cycle directly. The following settings will allow the heater to enter PID mode to achieve the desired temperature (in this instance a temperature of 125°C):


	Clean Settings	
Max Power [%]	100	
Proportional	15	
Integral	5	
Derivative	0	
Rise to Soak Time [s]	.1	} Bypass settings
Soak Time [s]	0	
Soak Power [%]	0	
Rise to Soak 2 Time [s]	.1	
Soak 2 Time [s]	0	
Soak 2 Power [%]	0	
Stabilization Time [s]	0	
Heater Set Point [C]	125	
Clean Time [s]	60	
Cool Time [s]	30	

Settings

5

Settings Screen

Click the Settings button in the Screen Selection tool bar to access the Settings screen. Use tabs to select settings operations. The Settings screen enables user to perform numerous tasks such as backing up and restoring settings, opening the log folder, adjusting period, and managing relays and sensor zeroing settings.

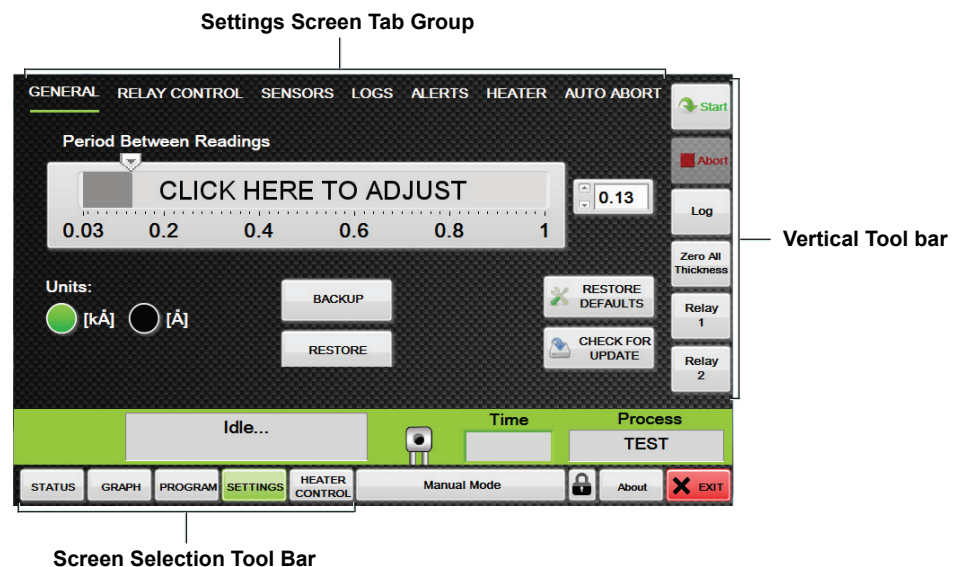


General Tab

Backup & Restore

The Backup and Restore commands enable the user to save deposition processes, heating cycles, and general settings in Eon™ software.

Selecting Backup  brings up the Backup screen.

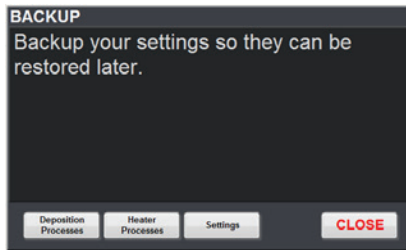


On the Backup screen, click on the item you wish to save.

Restoring backed up settings. Selecting the Restore button



opens the Restore screen.

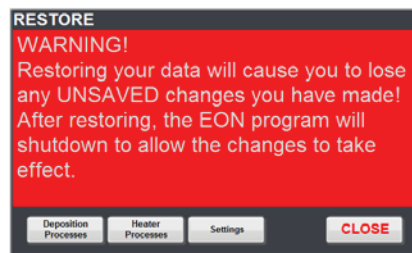

The user can now restore deposition processes, heating cycles, and general settings by clicking on the appropriate button. Note: The restoration process will overwrite any of the current settings you restore.

Restore Defaults

The **Restore Defaults** button




 
reinstates all of the settings to default values. This command is often used if the current settings are producing undesired results.

Period Control

The **Period** control tuner




is used to adjust data collection frequency in increments of 0.1 seconds. The period range is 100 milliseconds to 1 second.

For precision adjustment, moving the slider  produces an indicator showing the current value. Value can also be entered using the number control .

Relay Control Tab

Relay Control

The **Relay Control** panel features two relays with independent settings.

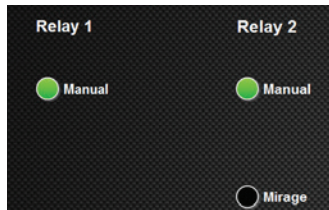

Although the two relays are essentially identical, Relay 2 settings contain the additional Mirage™ option, which should be selected when using Mirage™ air-cooling system.


Manual. When Manual is selected, the relay remains in its present state. The user can close (turn on) or open (turn off) the relay at will.

Mirage™ (Relay 2 Only). When the heater is active, Eon™ uses Relay 2 to control Mirage™. In order to activate the heater, the Relay 2 Mirage option must be selected. While the heater is active, Relay 2 settings cannot be changed (unless the user is in Manual mode [for more about Manual mode, see Chapter 6]).

Sensors Tab

Sensor Zeroing

With the **Sensor Zeroing** panel, the user can select when to zero Sensor 1 or Sensor 2. Settings for each sensor are identical.

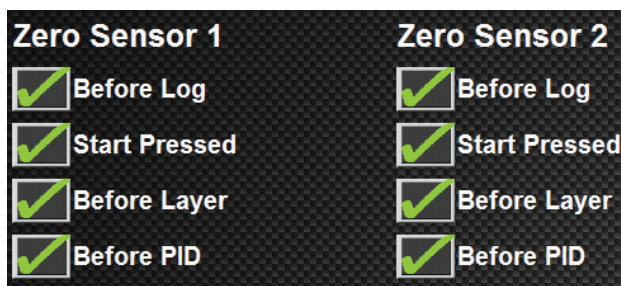

Before Log. Pressing Log button  zeros the sensor.

Start Pressed. Pressing Start button  zeros the sensor.

Before Layer. Starting a new layer zeros the sensor.

 
Before PID. Starting PID zeros the sensor.



WARNING Failing to zero a sensor before each layer or PID can produce flawed data. Selecting Before Layer or Before PID will ensure timely zeroing.

Logs Tab


Log



With the **Append Log Name** feature the user can add a specialized name to the end of the logs recorded by Eon™ software.


Note: If a log recording is already underway, the logging must be restarted for the new name to take effect.

Note: Naming restrictions built into Microsoft Windows will prevent log recording if the following characters are used: [* / > “ : |]. Eon™ software raises a prompt to warn the user that the name is invalid. Log files with incorrect characters in the name will not save.

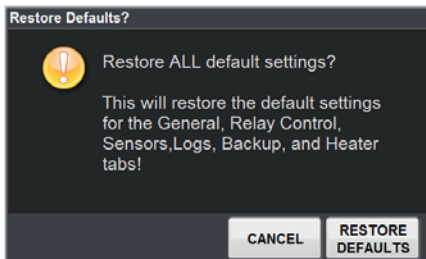

Removing the invalid character makes the warning disappear.

 
Opening saved log files. Selecting the **Open Log Folder**




opens the folder to which the logs are currently being saved. By default this location is “**Public Documents\EON_LOGS**”.

Alerts Tab


Sensor Alerts

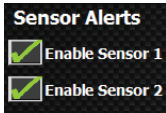The **Sensor Alerts** setting  provides the option of enabling or disabling the crystal failure alerts, which occur when the crystal frequency drifts out of the 5 MHz - 6 MHz range.

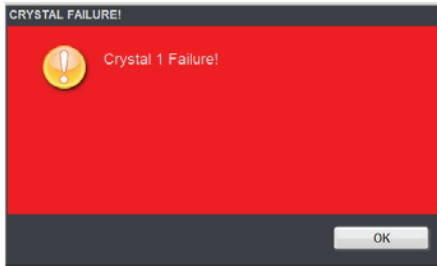


Heater Tab


Select Sensor Type

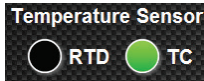Using the **Sensor Selector** , users must manually select the type of temperature sensor that is used inside the sensor head. If using the newer, thermocouple-based sensor, select **TC**. Older sensor heads use RTD sensors. **Note: If using RTD, Heater Constant A and B values must be changed to zero.**

Entering heater constants. The values to be entered are specific to each heater and are usually shipped with the documentation that accompanied your sensor. To enter the values, press the Settings button in the Screen Selection tool bar. Enter the respective values into Heater Constant A and Heater Constant B boxes. Deselect either box or press the Enter key on your keyboard to see values updated.

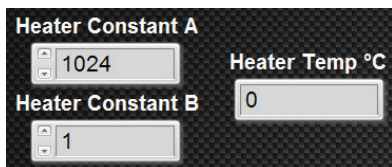

If for some reason the values are unavailable, please contact Colnatec Support at +1 480-634-1449 or support@colnatec.com.

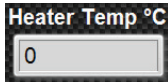
Heater Temp. The Heater Temperature readout  provides current heater readings, which can be useful while setting the heater constants.

Manual Mode

6

Manual Control

 
Manual Mode is an alternative operating environment in which the user can exercise manual control over the sources (Source 1, 2, and heater). To access manual mode, simply click on the Manual Mode button from any screen.




Adjusting Source/Heater Power

Using the following steps, the source and heater power can be manually adjusted by the user through the Manual Mode operating environment:

1. Press Manual Mode from any screen
2. Click on the Source Selection Control to select the source that needs to be manually controlled.

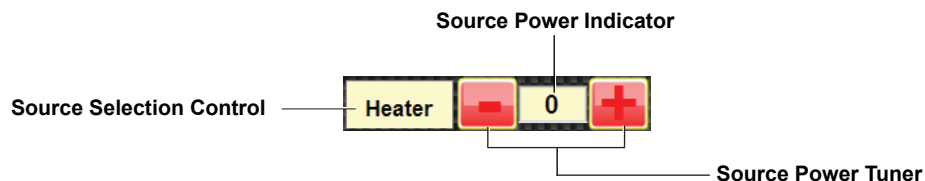

 
3. Clicking on the Source Selection control confirms that the heater has been preselected.



4. Use the Source Power adjustment buttons to increase or decrease the power of the selected source in increments of 0.1%, OR click directly onto the Source Power indicator and enter a specific power percentage. Then, press Enter.

Note: In order for the program to update the source power, the user must enter a new value and then click in an area other than the Source Power indicator or press enter.

Exiting Manual Mode

Click the Abort button  to exit Manual Mode and return to the standard operating environment.

Note: Pressing the Abort button returns both sources to 0 power.




IMPORTANT When the user manually adjusts the value of the source power output, the source will no longer be controlled by the PID.

Vertical Tool Bar

7

Using the Vertical Tool Bar

Like the Screen Selection tool bar, the vertical tool bar is always available. Use the vertical tool bar to start a deposition, abort a process, record a log, zero the sensors, activate the relays, enter Manual Mode, or exit Eon™ software.

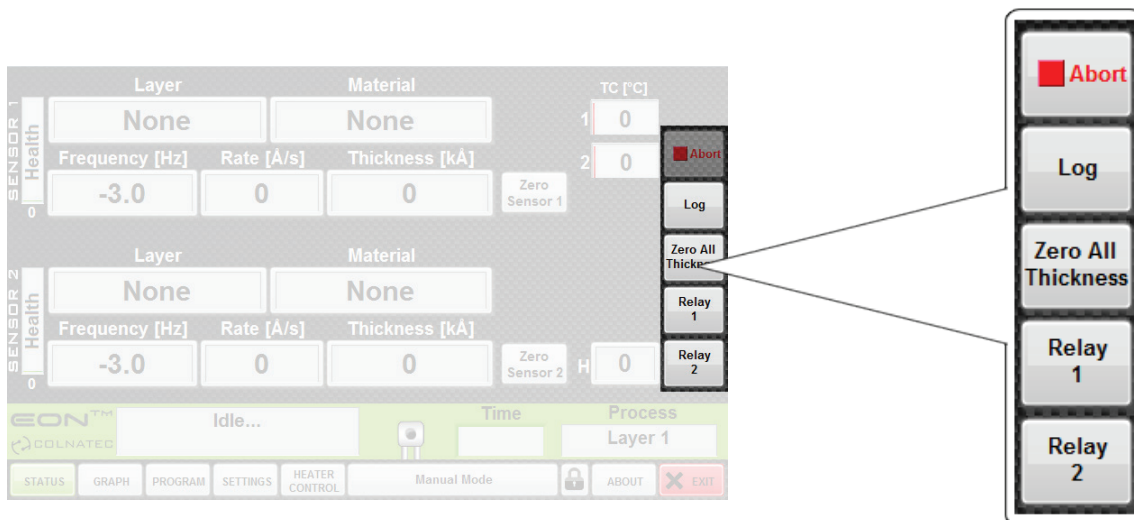

Aborting Manual Mode

Manual Mode can be aborted from any screen. Pressing the Abort button returns user to standard operating environment.



 
Logging Eon™ Status

Eon™ status can be logged to a monitor log from any screen. Pressing the Log button saves a monitor log to the monitor log save folder (Public/EON_LOGS/MONITORING”).




Zeroing the Sensors

The sensors can be zeroed from any screen. Pressing the Zero All Thickness button




Activating Relay 1 and Relay 2

 The Relay 1 and Relay 2 buttons



,

 

permit manual control of the relays.

Exiting Eon™ Software

Eon™ software can be exited from any screen. Simply press the Exit button



,

and when prompted, press Exit again.



WARNING The Abort button



DOES NOT shut off the heater.

The Abort button is used to cancel manual mode only.


Status

8


Status Screen

Navigate to the Status screen by selecting the Status button in the Screen Selection tool bar. The Status screen displays real-time information on the progress of the process.

Data for each sensor is represented - health, layer, frequency, material, rate, thickness, and percentage complete. Important information such as source power and temperature is also displayed.

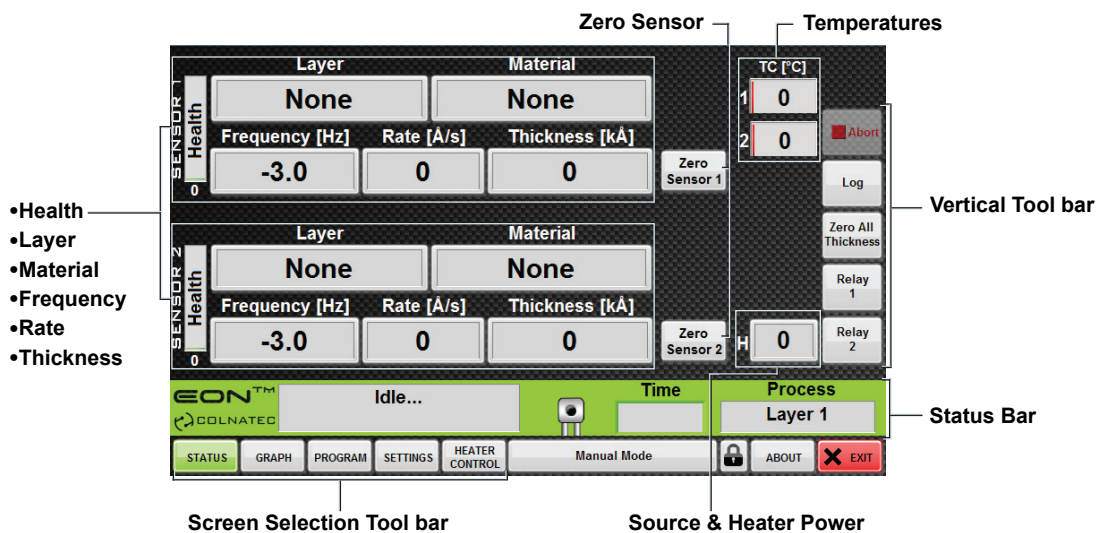

Health, Layer, Material, Frequency, Rate, and Thickness

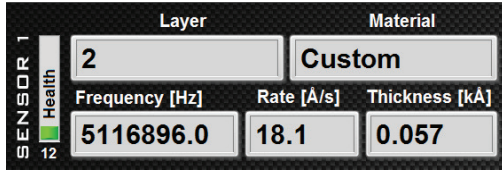

Layer. The name of the layer being applied.


Material. When the sensor is being used during a deposition to apply material, the indicator will flash red, informing the user that the sensor is being used to control the selected source for the material being applied. During this process, the material being applied is also displayed.

Frequency. Sensor frequency.

Rate. Rate of deposition.

Thickness. Thickness of deposition applied to sensor.

Zero Sensor

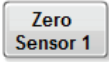The Zero Sensor buttons   zero corresponding sensor thickness to zero.

Source Power


The Source Power indicators display the current power being applied to Source 1 (S1 Power [%]), Source 2 (S2 Power [%]), and heater (Heater Power [%]).



Temperatures

Body Temp. The current temperature of the sensor body, which is connected through TC1.

 TC2. Axillary thermocouple connection.



Manually Zeroing Individual Sensors


Click the Zero Sensor button that corresponds to the sensor to be zeroed.

Green Status Bar

9

Status Indicators and Remote Process Control

A fixed menu available from any screen, the Green Status bar serves a variety of display and control functions.

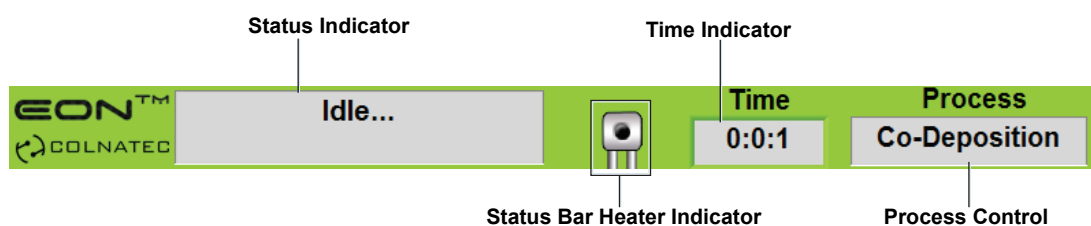

Status Indicator. Displays process Eon™ is currently performing. Information updates in real-time as Eon™ performs each task.

Status Bar Heater Indicator. Displays the current status of the heater.

When Eon™ is supplying power to the heater, the indicator turns bright red .

Time Indicator. Displays the run-time of the current active process. The Time Indicator also retains the run-time of the last completed or aborted process.

Remote Process Control. When a process is selected, the Status screen will display the first material to run on each sensor. If no materials are selected to be measured by one of the sensors, the sensor will display **None** in the Layer and Material indicator.


Layer	Material
None	None

Graphs

10

Graph Screen

To view the Graphs screen, click on Graphs in the Screen Selection tool bar. The Graphs screen features line graphs for frequency, temperature, rate, power, and thickness. Unlike real-time data, data in graph-form can provide the user with a comprehensive, historical perspective on a developing deposition process.

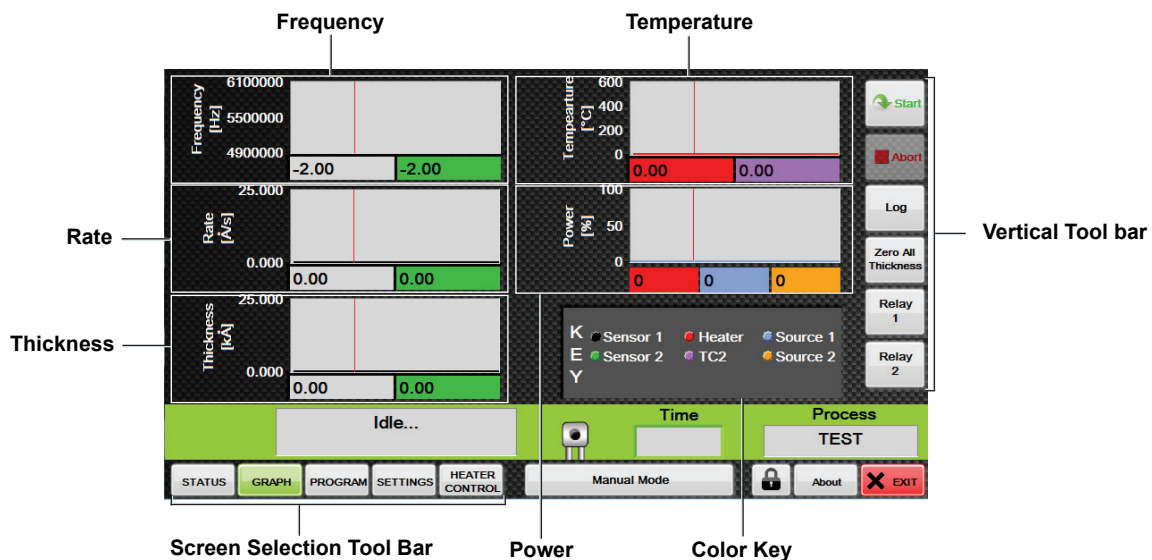

Adjusting Min/Max Range of Graphs

Click anywhere on a graph to produce the range adjustment window.

Please select a maximum and minimum range for this graph

Minimum: 0 Maximum: 25

CANCEL OK


Graphs

The graphs provide a visual representation of data gathered by Eon™. The following data is presented by the graphs:

- **Frequency**
Displays frequency over time in [Hz]
- **Rate**
Displays the rate of the material application over time in [Å/s].
- **Thickness**
Displays the thickness of material application over time in [kÅ].
- **Temperature**
Displays the temperature over time in [°C].
- **Power**
Displays the power of the sources and heater over time in percentages in [%].

Color Key

 The Color Key




displays the color values representing the various devices being depicted on each graph.

Screen Lock


11


Password-Protect Eon™ Screens

The Eon™ Screen Lock enables the user to lock any screen that appears on the Screen Selection tool bar. Locking a screen helps ensure that the controls and settings on each screen remain secure and under password protection.

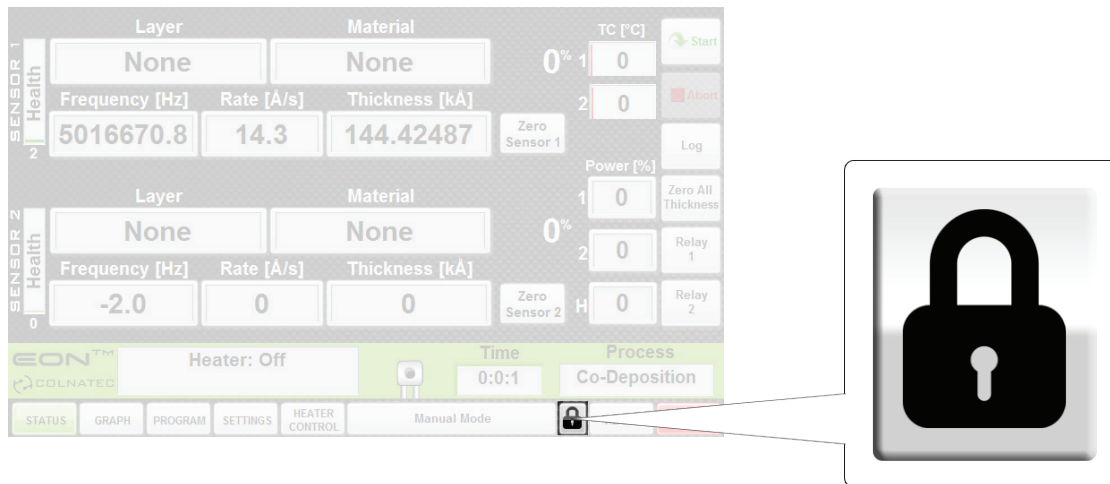


Screen Lock Button

To access the Screen Lock controls, click on the Screen Lock button . If a password is already in place, the password prompt appears.

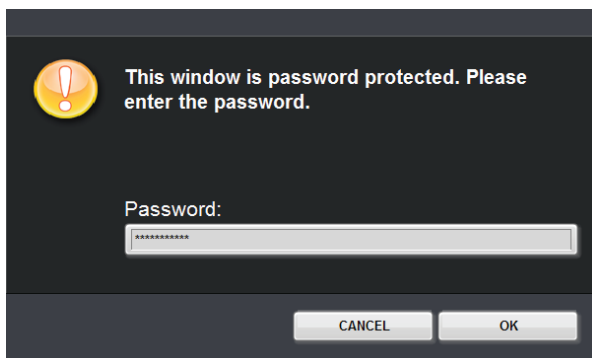


Entering the correct password will exit to the Screen Lock screen.

If a password is NOT already in place, the Screen Lock screen appears. Use these controls to lock and unlock screens and change the Screen Lock password.

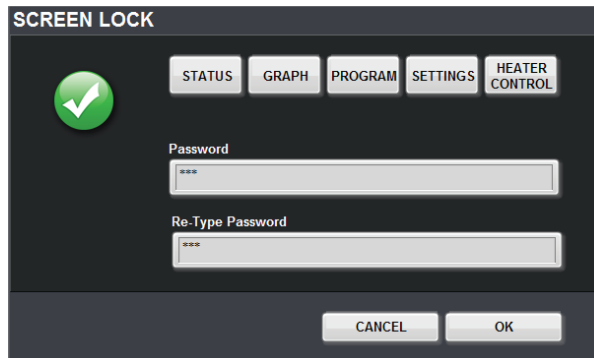

Locking a Screen


On the Screen Lock screen, select the screen(s) to be locked. Selecting a screen highlights it.



Click OK to engage Screen Lock protection. When clicked on, the *protected* screen(s) will now generate a password prompt.

Setting a New Password

The user may keep an existing password or enter a new password using the password controls. In order for a new password to be accepted, the Password and Re-Type Password fields must contain the same password.

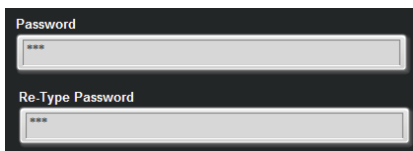


Click OK to save new Screen Lock screen settings or Cancel to return to original settings.




IMPORTANT Leaving password fields empty DOES NOT disable the Screen Lock. Attempting to access a locked screen will continue to produce a password prompt. Leave field blank and click OK to proceed to the Screen Lock menu. To disable the Screen Lock, unclick any locked screens.

Clicking OK saves screen lock and password settings.

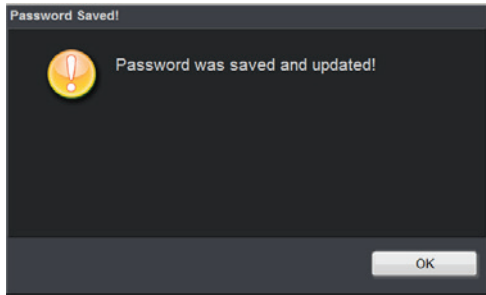

Resetting Password

To reset the Screen Lock controls password, click on the Screen Lock button  and enter the following code into password prompt: **45647kyswx94272fyshq**

When the Screen Lock screen appears, enter a new password into the password fields.

Troubleshooting

12

Symptom	Cause	Solution
Frequency reads -2.0 [Hz]	Sensor not detected	Check sensor connection
“Could not connect to Eon™ after 3 seconds” message appears	Wrong COM port selected	Restart and select the correct COM port
Layer completes immediately	Thickness is set to 0 in the layer	Enter a value other than 0 for the layer
Heater shuts off prematurely	Clean command improperly selected	Use Activate Heater command for your heating cycle
Heater runs without stopping	Activate Heater improperly selected	Use Clean command for your heating cycle
At program start, a “Wrong Firmware” notification appears, even though the firmware is current	Noise in the RS232 line	Make sure the RS232 line is connected and secure. Separate the RS232 line and any high current power lines.
Crystal warnings fail to appear	Sensor Alerts disabled	Go to Settings screen and enable Sensor Alert for sensor(s) in use

Device Parameters

Density	0.10 to 99.999 [g/cm ³]
Z-Factor	0.10 to 15.00

Coating

Density	0.100 to 99.999 [g/cm ³]
Z-Factor	0.00 to 15.000
Rate Set-point	0.00 to 9999.99 [Å/s]
Thickness Set Point	0.00 to 9999.99 [KÅ]
Proportional Gain	0.00 to 9999.00 [s]
Integral Time	0.00 to 99.9 [s]
Derivative Time	0.0 to 99.9 [s]
Rise to Soak	0.10 to 9999.9 [s]
Soak Time	0.00 to 9999.99 [s]
Soak Power	0.00 to 100.00 [%]
Rise to Predeposit	0.00 to 999.99 [s]
Predeposit Time	0.00 to 9999.99 [s]
Predeposit Power	0.00 to 100.0 [%]
Dwell Time	0.0 to 9999.9 [s]

Measurement

Frequency Resolution	+/-0.002 [Hz]
Display Rate	10x to 1x per second
Crystal Frequency Range	6 [MHz]
Filter	0-1
Alpha	0-1

Process Display

Film	Selected Material
Layer	Layer Being Deposited
Rate	0.00 to 99.9 [Å/s]
Thickness	0.00 to 999.9[KÅ]
Frequency	-3.00 to 6,500,000 [Hz]
Run Time	Hh/mm/ss
Temperature	0 to 999.9 [°C]
Health	0.00 to 100 [%]

Communications

Factory Set	RS-232 [PC version]
-------------	---------------------

Inputs and Outputs


Voltage input	24 [VDC]
RS232 Input	One Half Duplex
Sensor Input	Two BNC Connector
TC Output	2 Type K Connectors
0-5 [VDC] Control Output	One DB9 Connector
Dual Relay Output	

Tempe-Eon™ System

A Appendix

Tempe-Eon™ System Configuration

Rendering illustrates basic connections of Tempe-Eon™ system.

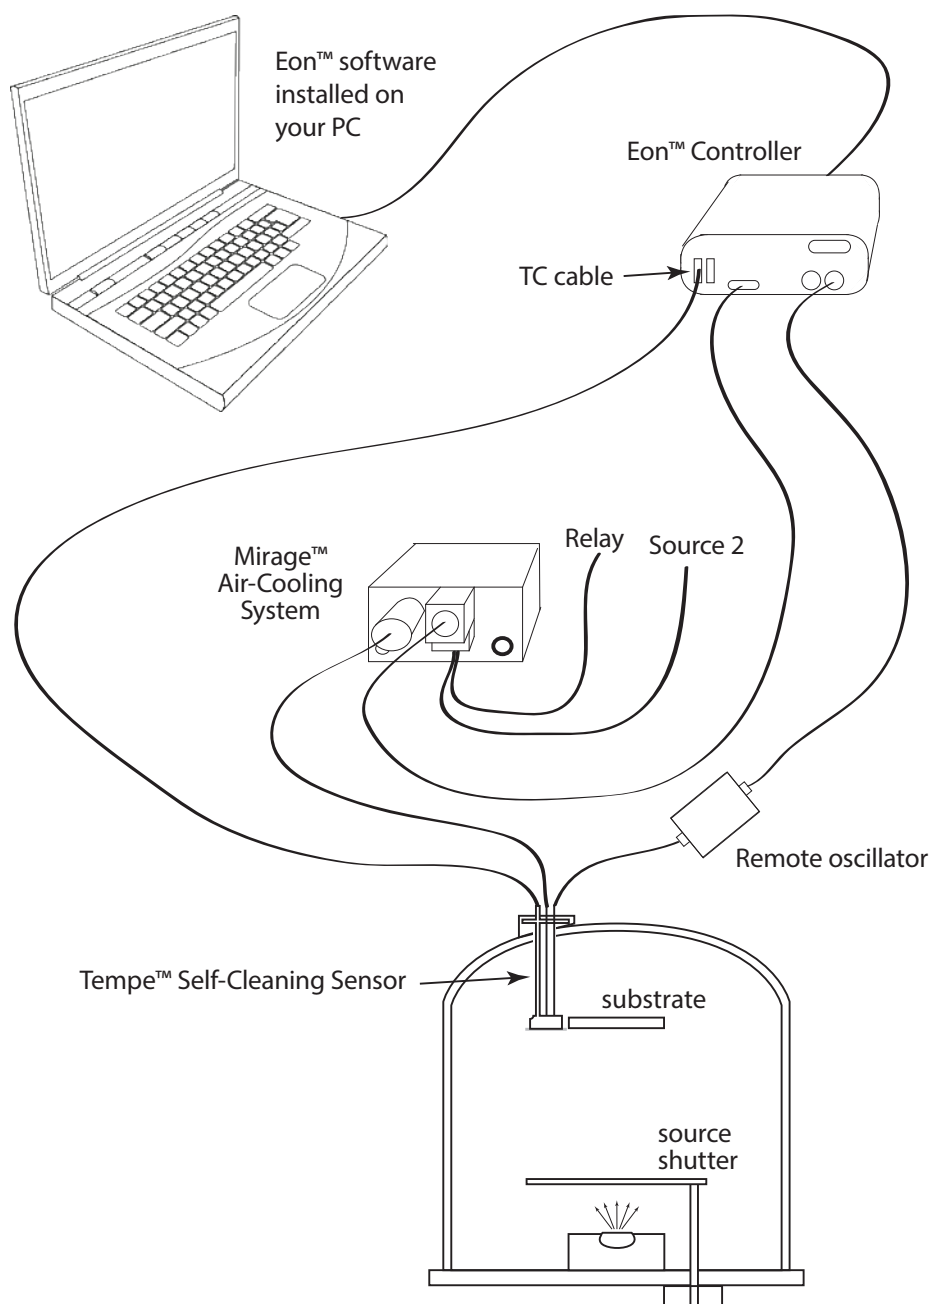


Quick Info

B Appendix

Screen Selection Tool Bar

 The Screen Selection Tool Bar is the collection of buttons used to access the various screens in which the user will be working. The buttons consist of Status, Graph, Program, Settings, and Heater Control.



Adding a process

1. Press the Program button to enter the programming screen.
2. Press the New button located beneath the Process List.
3. Enter the desired name for the process.
4. Select the process type - Sequential or Codeposition.
5. Click OK.
6. This process is now selectable through the Process List or the Remote Process Control panel on the Green Status bar.

Note: In order for the program to update the source power, the user must enter a new value and then click away from the Source Power indicator.

Renaming a process

1. Press the Program button on the Screen Selection tool bar.
2. Double click the process you wish to rename.
3. In the new window, enter the new name for the process.
 - Field must not be left blank
 - Name must not already exist
4. Click OK.

Deleting a Process

1. Press the Program button in the horizontal tool bar.
2. On the Process List select the Process to be deleted.
3. Press the delete key directly beneath the Process List.

Edit the name/rate/thickness of a process

1. Click the Program button to enter the Program screen.
2. Click the process that has the layer to edit.
3. Double-click the layer to be edited.
4. Modify the name, rate, and/or thickness.
5. Click OK to save changes.

Adding a layer to a process

1. Press the Program button to access the Program screen.
2. Select the process from the process list. This will open the Process Layers list.
3. Press the New button under the Process Layers list.
4. Enter a new name to create a new layer, or select a layer that has already been created by clicking the arrow on right of the Name and selecting it from the list of layers.
5. Enter the desired Rate in [$\text{\AA}/\text{s}$] and the Thickness in [$\text{k}\text{\AA}$]. Click OK.

Note: The name cannot be left blank. Typing the name of a layer that is already created will use that layer's settings.

Copy Layer

1. Click the Program button to enter the Program screen.
2. Select an existing layer and press Copy to produce a copy in the list.

Re-Ordering the layers

1. Click and drag the layer to the desired location in the list.
2. Layers are executed in numerical order, from top to bottom.

Changing properties of a layer

1. Press the Program button on the bottom of the screen.
2. Select the process in the Process List containing the layer that requires editing.
3. From the Process Layers list select the layer to be edited.
4. Double-click on the Property to be edited.
5. In the new window that opens, enter the new value for the property.
6. Press OK.

Note: If an incorrect value is entered for the property selected, a notification window will appear displaying the acceptable values for that property.

Layer property list

- **Materials:** The material being applied during the deposition process. This entry turns to “Custom” if the Density or Z-Factor is modified by the user.
- **Density [g/cm³]:** The density of the selected material being applied.
- **Z-Factor:** Acoustic impedance factor which is used to compensate for dense materials and is predefined based on the selected material.
- **Tooling [%]:** The geometric relationship between the substrate and the positioning of the sensor.

Removing a Layer

1. Press the Program button in the Screen Selection tool bar.
2. From the process list, select the Process with the layer that needs to be removed.
3. In the Process Layers, list select the layer that needs to be removed.
4. Press Remove directly beneath the Process Layers list.

Note: Removing the layer only removes the layer from the Process Layers list. The layer can be re-added to the list by pressing “New” and selecting the layer from the dropdown menu. See “Adding a process” on the first page of this appendix.

Deleting a Layer

1. Press the Program button on Screen Selection tool bar to enter the Program screen.
2. Select a process that contains the layer to be deleted.
3. After selecting the Layer from the Process Layers list, press Permanently Delete Layer to delete the layer.

Warning: This action will permanently delete the layer from ALL processes. The layer will also be deleted from the list of layers. There is no way to recover a layer once it is deleted.

Changing the material for a layer

1. In the Program screen, select the layer with the material to be changed.
2. Double-click on the Material row.
3. In the new window select a new material.
4. Click OK.

Note: When editing Density or Z-Factor, the material value defaults to Custom to prevent contradictions from occurring between the material and the material values.

Heater control

Activating the heater

1. Press the Heater Control button to enter the Heater Control screen.
2. Select the Process list and, then, the heater process to be run.
3. Press the Activate Heater button under the Settings list.

Shutting off the heater

1. Press the Heater Control button to enter the Heater Control screen.
2. Press the Heater Shutoff button under the Settings list.

Note: Abort does NOT shut off the heater!

Creating a heater process

1. Press the Heater Control button to enter the Heater Control screen.
2. Press the New button located under the Heater Process list.
3. In the new window that appears, enter the desired name for the new heater processes.
4. Click OK.

Cleaning the Sensor with the heater

1. Press the Heater Control button to enter the Heater Control screen.
2. Select the Process list and, then, the heater process to be run.
3. Press the Clean button under the settings list.

Clean Settings

- **Max Power:** This is the maximum power that the Eon™ will send to the heater, regardless of the temperature. This means if the temperature set requires the heater power to go above the maximum, the Eon™ will prevent the heater from going any farther and will stay at the maximum power limit.
- **Proportional:** This is the proportional coefficient to control the material deposition rate during the PID phase.
- **Integral:** The integral time constant to control the material deposition rate during the PID phase.
- **Derivative:** Derivative time constant to control the material deposition rate during the PID phase.
- **Rise to Soak Time:** This is the time span that the Eon™ will raise the source power from 0% to the desired soak power.
- **Soak Time:** Once the soak power is reached, this is the time the Eon™ will sit at soak power before continuing to Rise to Predeposit.
- **Soak Power:** This is power percentage that the source will achieve during the soak process.
- **Rise to Soak 2 Time:** This is the amount of time that the Eon™ will take to change the current source power to the power percentage set for Predeposit.
- **Soak 2 Time:** This is the time that the Eon™ will maintain the set Predeposit Power before entering PID mode.
- **Soak 2 Power:** This is the power percentage that the source will achieve during the Soak 2 Processes.
- **Stabilization Time:** This is not implemented and is a place holder for future versions. Values here will not affect the heating process.
- **Heater Set-point:** This is the desired temperature for the heater to reach
- **Clean Time [Clean Only]:** This is the time that the heater will remain at the Heater Set-point temperature before cooling off.
- **Cool Time [Clean Only]:** This is the amount of time the mirage will cool the heater off after the Clean Time has passed.

Vertical tool bar

Abort button to exit Manual Mode

1. From any screen, press the Abort button to end a process or exit Manual Mode.

Note: Abort does NOT shut off the heater!

Logging the status of the Eon™

1. Press the Log button on the vertical tool bar.

Note: Eon™ status can be logged to a monitor log from any screen. Pressing the Log button saves a monitor log to the monitor log save folder (MyDocuments/eon_logs/monitoring”).

Zeroing Both Sensors Manually

1. Press the Zero All Thickness button on the Screen Selection tool bar.

Activating Relays Manually

1. The relays can be activated from any screen.
2. On the Screen Selection tool bar, toggle the Relay # button to activate the relays.

Activating Manual Mode

1. The user can switch between the automated software environment and manual environment.
2. From any screen select the Manual Mode button.

Note: During manual mode, the Manual Mode button blinks red.

Exiting Eon™ Software

1. Eon™ software can be exited from any screen.
2. Press the Exit Button
3. When prompted, press Exit again.

Exiting Manual mode

1. Press the Abort button to exit Manual Mode from any screen.

Settings

Note: All settings are automatically updated and saved as soon as they are changed.

Adjusting Eon™ period readings

1. Press the Settings button on the Screen Selection tool bar.
2. Select General tab.
3. Click and drag the marker on the Period control to adjust the period time in increments of 100ms.

Changing Thickness Units [KÅ, Å]

1. Press the Settings button on Screen Selection tool bar.
2. Select General tab.
3. Select the desired thickness measurement units.

Entering the Heater Constants

1. Press the Settings button on the Screen Selection tool bar.
2. Select General tab.
3. Enter the value of Heater Constant A and Heater Constant B.
4. Update the values by unselecting the box or pressing enter.

Note: The heater constants ensure that the heater functions correctly. Each heater has its own unique values. These values can be found in the documentation that ships with the product. If these values are unavailable, please contact Colnatec Support at support@colnatec.com or call 480-634-1449.

Disable/Enable Sensor Failure Alerts

1. Press the Settings button on the Screen Selection tool bar.
2. Select Alerts tab.
3. Check or uncheck the checkmark box of the corresponding sensor to enable or disable failure alerts.
 - Checked: Shows sensor failure alerts
 - Unchecked: Hides sensor failure alerts

Append a Log Name to Log files

1. Press the Settings button on the Screen Selection tool bar.
2. Select Logs tab.
3. Enter text to append a log filename

Note: Using the characters */>:| will cause the filename to be invalid and can prevent logs from being recorded.

Restore Default Settings

1. Press the Settings button on the Screen Selection tool bar.
2. Press the Restore Defaults button on the settings screen.
3. A prompt will appear warning the user that selecting OK will return all settings to a default state.

Force Relays to shutoff when a process is started

1. Press the Settings button on the Screen Selection tool bar.
2. In the Relay Control section, check Start Shutoff for the desired relay you wish to shutoff on process start.

Set when relays activate during deposition process

1. Press the Settings button on the Screen Selection tool bar.
2. In the Relay Control section, select the round radio button associated with the step during the deposition process when the relay should activate.
 - Manual: The relays will not activate during the deposition process automatically, but can still be controlled by the Relay # button.
 - Start: At the start of each layer/material in the process the relay will activate and will deactivate at the end of each material.
 - Predeposit: The relay will activate during the predeposit phase of the deposition process for each layer/material. The relay will then shutoff at the end of the deposition process.
 - Auto Deposition: The relay will activate during the dwell phase, just before the PID activation. This allows the dwell time to occur between shutters release and PID activation.
 - Mirage: Eon™ uses Relay 2 to activate Mirage™ when the Tempe™ heater is engaged. Mirage™ MUST be selected before the heater can be used, allowing Eon™ to control Relay 2 automatically during the deposition process.

Setting when Eon™ automatically zeros sensor thickness

1. Press the Settings button on the Screen Selection tool bar.
2. In the Sensor Zeroing menu, checkmark each setting associated with the sensor that is to have its thickness automatically zeroed.
 - Before Log: Eon™ zeros thickness when Log button is pressed.
 - Start Pressed: Eon™ zeros thickness when Start” button is pressed to start a new deposition.
 - Before Layer: Eon™ zeros thickness each time a new layer/material engages during the process.
 - Before PID: Eon™ zeros thickness each time a new layer/material activates the PID.

Safety, Handling, & Support

C Appendix



WARNING All electrical components are to be considered extremely dangerous if tampered with in any way. Colnatec is not liable for any injury resulting from product misuse, modification, or disassembly.



WARRANTY LABEL If the warranty label has been tampered with, “VOID” will appear where the warranty label was originally placed. If this is visible at the time of arrival, it is important that you contact Colnatec immediately after receiving the product.



EXAMINE YOUR NEW EON™ FOR ANY SIGNS OF PHYSICAL DAMAGE. ALSO, ENSURE THAT THE TAMPER-EVIDENT LABELS ARE INTACT

Before shipping, your Eon™ was calibrated and tested by Colnatec to meet the highest quality standards. It is important that you take a few minutes to inspect the product to ensure that your equipment was not damaged or otherwise tampered with during transit.

About Eon™

With the ability to sense deposition and temperature with high precision, the Eon™ thin film monitor is one of the newest advancements in Thin Film deposition monitors. The Eon™ provides features that help improve measurement accuracy for better process control.

LabVIEW® Interface

The Eon™ offers a simple LabVIEW® interface that provides an operating environment that is intuitive, efficient, and impressive. The Eon™ is easy to set up right out of the box.

Software Updates

The Eon™ interface software can be upgraded on site to provide software improvements. There will be notifications when these updates become available.

Inspection & Initial Setup

Examine Eon™ for any signs of physical damage. Also, make sure that the tamper-evident labels are intact. In order to ensure safe, correct operation of your Eon™, please follow the step-by-step instructions presented in the Eon™ Quick Start guide included with your product.

Warranty

Eon™ is warranted to the original purchaser to be free of any manufacturing-related defects for one year from the date of purchase. Colnatec reserves the right to repair or replace the unit after inspection.

Contact Colnatec Support


511 W. Guadalupe Road, Suite 23
Gilbert, AZ 85233
(480) 634-1449
support@colnatec.com
www.colnatec.com

Tooling Factor

D Appendix

$$\text{Tooling \%} = \left(\frac{dc}{ds} \right) \cdot 100$$

$$\text{Tooling \%} = \left(\frac{dc}{ds} \right)^2 \cdot 100 \cdot \left(\frac{\cos \phi_s}{\cos \phi_c} \right)$$

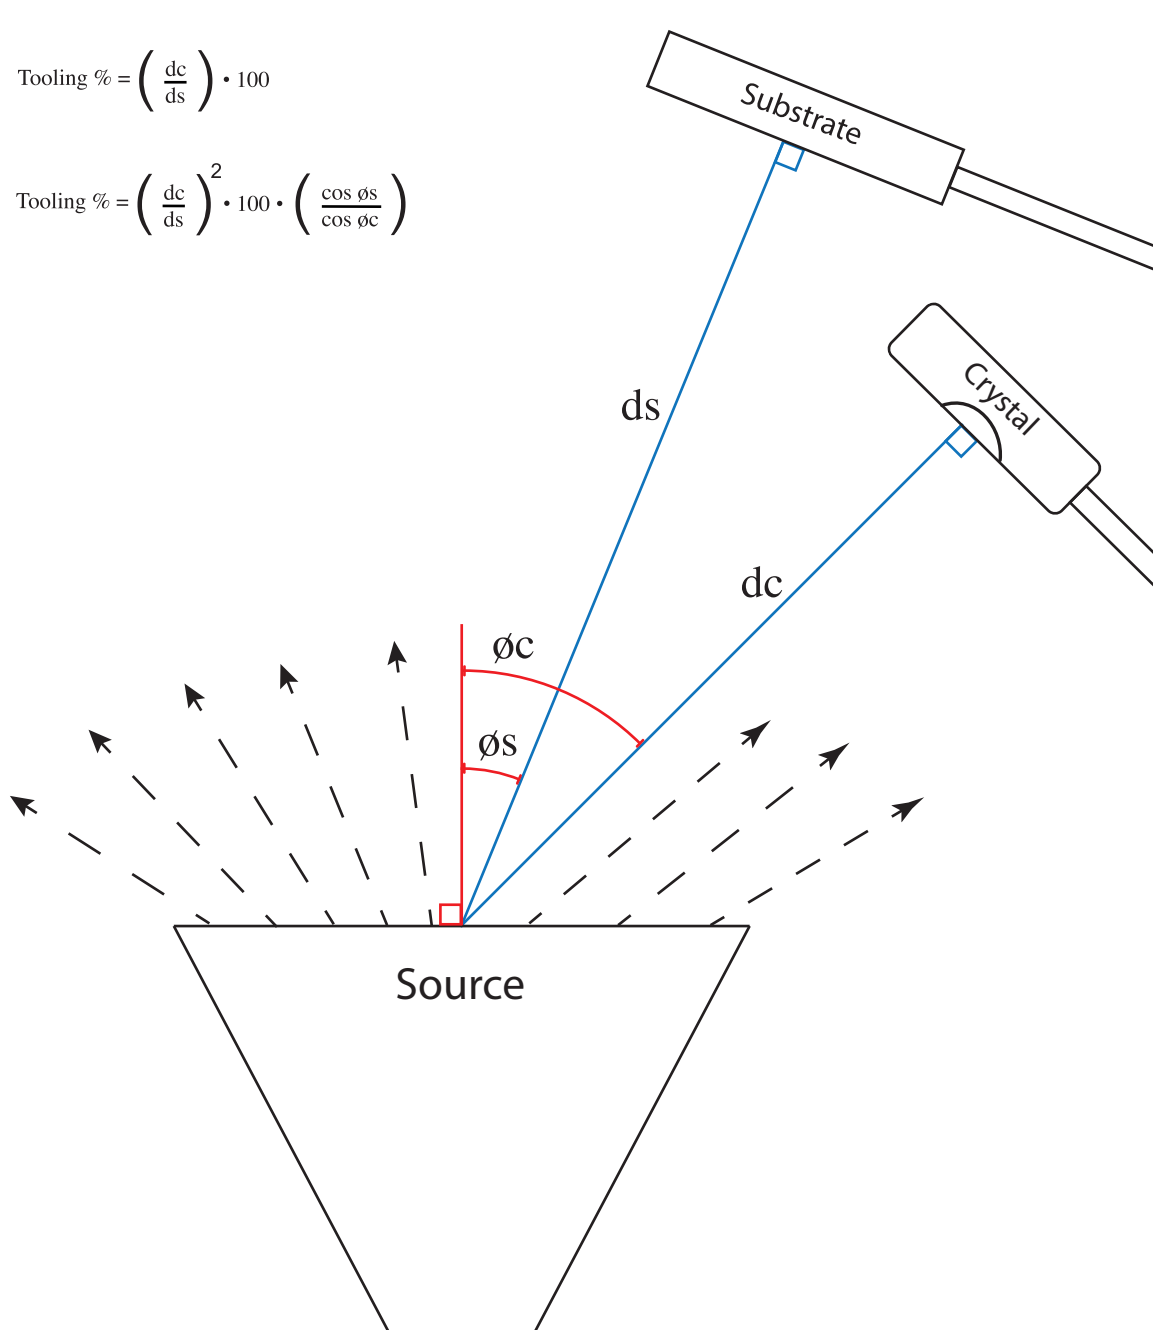

Index

A

Abort 29, 37, 38, 39, 57, 59
Aborting a Process 38
About Eon™ 63
Accessories 9
Activate Heater 28, 49, 57
Activating Relay 1 and Relay 2 39
Adjusting Y Values 44
Advanced Settings 30

B

Backup 31, 32
Backup & Restore 31
Body temperature 26, 29

C

Clean 28, 30, 49, 57, 58
Clean Settings 30, 58
Coating 50
Color Key 44, 45
Communications 51
Copyright 71

D

Delete Layer 56
Deleting a Layer 56
Deleting a Process 54
Drivers 19

E

Eon™ at a Glance 7, 8, 9, 10, 11, 12, 13
Eon™ Connectors 7
Eon™ System Assembly 14
Exiting 37, 39, 59
Exiting Eon™ Software 39, 59
Exiting Manual Mode 37

F

Frequency 32, 35, 40, 41, 44, 45

Index

G

Getting Started 14, 15, 16, 17, 18, 19
Graph 44, 54
Graphs 44, 54
Graph Screen 44
Green Status Bar 43

H

Health 41, 51
Health, Layer, Material, Frequency, Rate, and Thickness 41
Heater 14, 15, 24, 25, 26, 27, 28, 29, 30, 33, 35, 36, 39, 41, 43, 45, 57, 58, 59, 60, 61
 Constant 24
 Control 14, 15, 24, 25, 26, 27, 28, 29, 30, 54, 57
 Control Buttons 28
 Control Screen 24
 Power 29, 36, 41
 Settings 24, 26, 27, 28, 29
 Settings List 24, 26, 27, 28
 Shutoff 24
 Thermostat 24, 29
Heating Cycle 24, 25, 28, 30, 49
Heating Cycle List 24, 25

I

Inputs and Outputs 52
Inspection & Initial Setup 63

L

Layer 20, 21, 22, 34, 40, 41, 49, 55, 56, 61
 New 22, 34, 55, 61
 Deleting 56
Layer Properties Defined 23
Layer Properties List 20, 22, 23
Layers list 55, 56
Locking a Screen 47
Log 33, 34, 38, 59, 60, 61
Log files 60
Logging Eon™ Status 38

Index

M

Manual Control 39
Manually Zeroing Individual Sensors 46
Manual Mode 39, 40, 41, 42, 64
Material 23, 24, 25, 29, 30, 36, 44, 45, 47, 49, 60, 61, 63, 66
Measurement 55
Mirage™ Air-Cooling System 12

P

Password 46, 47, 48
Password-Protect Eon™ Screens 46
Period Control 32
Predeposition 36, 40
Process Display 51
Process List 20, 54, 55
Program 20, 21, 22, 23, 54, 55, 56
Program Control 20, 21, 22, 23
Program Control Screen 20

Q

Quick Info 54

R

Rate 21, 27, 40, 44, 45, 55, 58
Relay Control 25, 33, 61
Removing a Layer 56
Restore 31, 32, 61
Restore Defaults 32, 61
RS232 49
RTD 7, 14, 35

Index

S

Safety 62, 63, 64
Screen Lock 46, 47, 48
Screen Lock Button 46
Screen Selection Tool Bar 20, 24, 31, 44, 54
Sensor Alerts 35
Sensor Zeroing 31, 32, 37, 66
Setting a New Password 47
Settings 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 54, 57, 58, 60, 61
Settings Screen 31
Software Updates 63
Source 7, 16, 27, 28, 36, 37, 40, 41, 54, 58
Source Power 36, 40, 41, 54
Starting a Deposition 41
Status 28, 38, 40, 41, 42, 43, 54, 59
Status Indicators and Remote Process Control 43
Status Screen 40
Support 35, 60, 62, 63, 64

T

TC (Thermocouple) 42, 52
Tempe-Eon™ System 53
Tempe-Eon™ System Configuration 53
Temperature & Power Indicators 24, 29
Temperatures 40, 42
Thickness 21, 40, 41, 44, 45, 55, 60, 61
Time 22, 26, 27, 28, 40, 43, 44, 45, 58, 60, 61, 62
Tooling Factor 65

U

Units 60
Update 60
Updates 63
USB 7, 10, 18, 19
Using the Vertical Tool Bar 38

Index

V

Vertical Tool Bar 38, 39

W

Warranty 62, 63

Z

Zeroing the Sensors 39

Zero Sensor 40, 41, 42

© Copyright 2014 Colnatec

All information contained within this technical manual and accompanying pages are copyright of Colnatec. All rights reserved. It is a breach of copyright if this technical manual is copied, distributed, or reproduced, in whole or part, using any means whatsoever, without the prior written approval of Colnatec.

Colnatec gives no condition or warranty, expressed or implied, about the fitness of this technical manual or accompanying hardware product. Colnatec reserves the right to make changes to this technical manual or accompanying hardware or design without notice to any person or company.

Colnatec shall not be liable for any indirect, special, consequential or incidental damages resulting from the use of this technical manual or the accompanying hardware or design whether caused through Colnatec's negligence or otherwise.

October 2014
Ver. 3.0.11